



04 A



05 A



06 A / 26 L



08 A / 28 L



09 A



10 A / 51 L



18 A / U9 L



17 S



21 L



22 L



29 A / 27 L



30 L



31 L



32 L



33 A / 53 L



 
34 L



35 A



36 A / 56 L

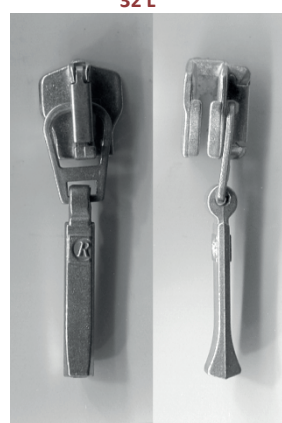

40 A / 52 L



 
42 A / 24 L



43 A



44 A

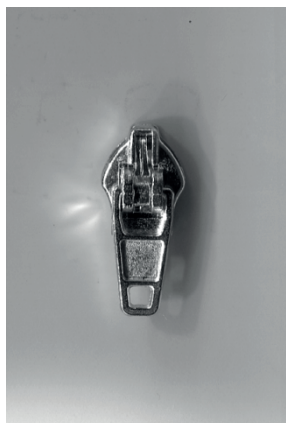

46 SP



47 A



48 L



57 A



64 A REV



81 A / 80 L



83 L



85 A / 84 L



 
AV L



OK A / AD L



AK A

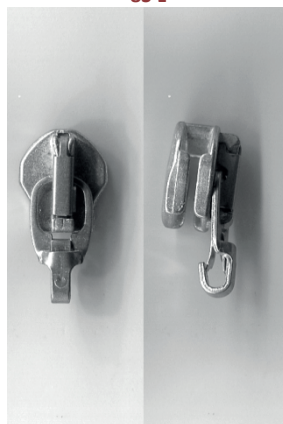

APA / 4V L



BV A



BE A



BN A / LB L



DO A / DL L



EY L



EA (Transparent & Black)



 
EX A / WM L



GK L



IR A / OL L

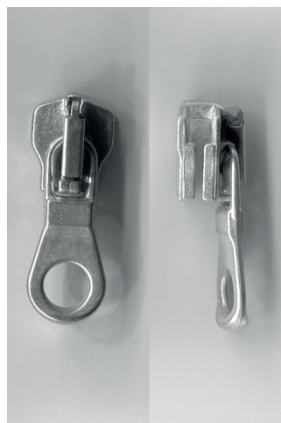

IS A / Q7 L



JR A / NX L



KQ A / JX L



 
KLA / OJ L



L9 A



LH A / O2 L

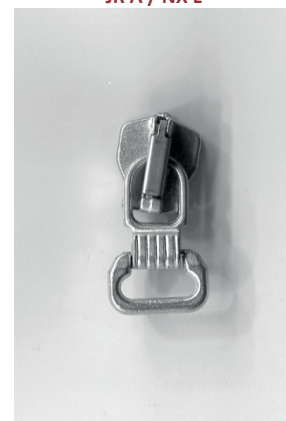

LA A / LL L



LE A



LTL



MX A



 
MPA / MLL



MO A



NU A / NT L

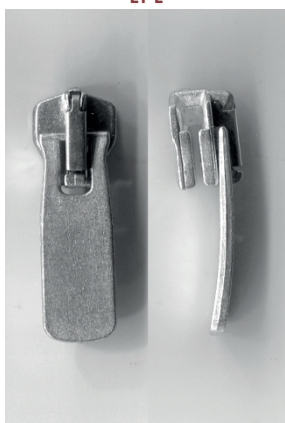

NI A



 
OP A / K5 L / A0 A (Reverse)



OQ A



PN A / PU L

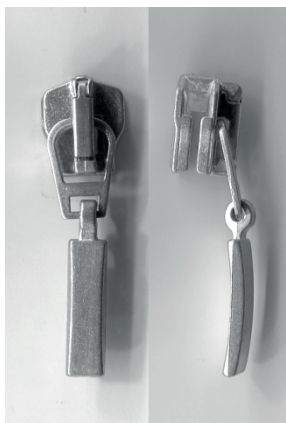

PE A / PB L / P1 A (Reverse)



PO A / PM L



PP A



 
PW A



PX A



P6 A

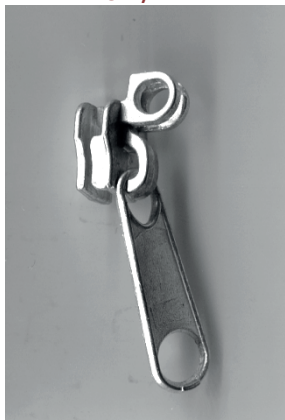


PJ L



QC A



 Q0 A

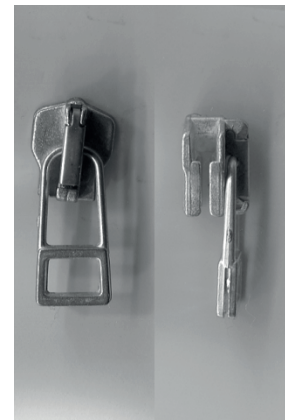

RI A / ET L



RH A / E0 A (Reverse)



RY A / OZ L



R7 A



RL L



RZ A



RW A / OM L



RP A / Z3 L



 
SB A / SL L



TCA



TE A / SJ L

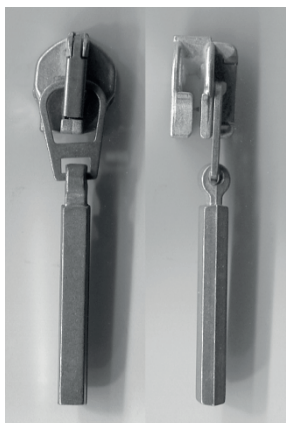

S1 A / 1H L



 
SA A / 87 L



SK A




S3 A

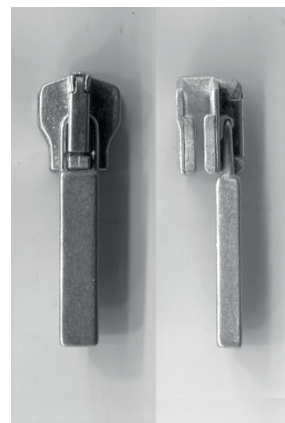

TG A



 TT A / K8 L

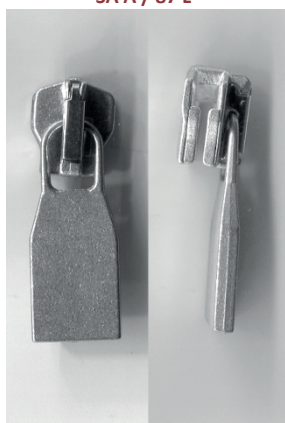

TK A / K6 L



 
TD A




TY A



TP A / K9 L

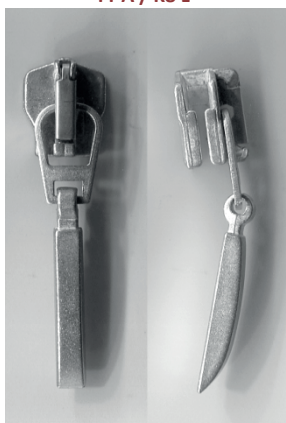

TFA A / N7 L

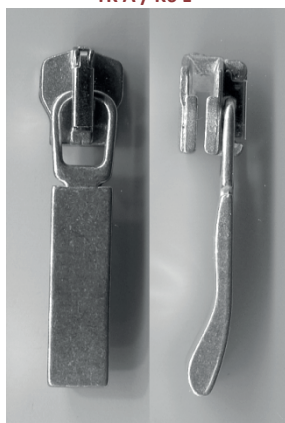 

T5 A / U6 L



UFA A / V3 L



U2 A



VRA A



XMA A



XGA A



ZTA A



U7 A / UCL



WAA A



W5 A / 3H L



XB A



3X A / 4Y L



3K A / 3L L



 
3M L



XL A / XI L



2Z A

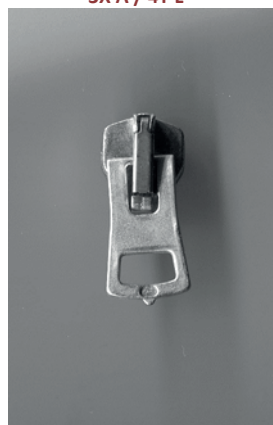

5M A



9Z



9X



9J



9L



9M



2F